

# Anvisning for startlås

112-14159

ANV014


NO



## Tilkobling

30	+ Mating
15/54	Tenning/Radio
50	Starter
57	Ekstra funksjon
58/57	(Ikke tilkoblet)

## Tilbakefjærende

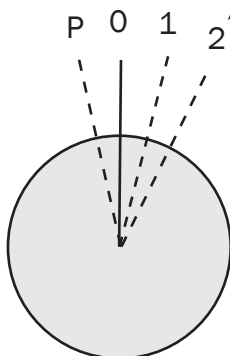

## Stillinger

P.	Parkeringsstilling	30-57
0.	—	
1.	Tenning/Radio	30-15/54
2.	Start/Tenning/Radio	30-50-15/54

2021-10-29



Olssons i Ellös AB • Tlf. +46 304-751010  
Slätthultsvägen 12 • S-474 31 Ellös  
www.olssonparts.com • order@olssonparts.com