

Anvisning for startlås

112-14109



ANV019

NO




Tilkobling

  30/1	+ mating
30	+ mating
15	Tenning
15/54	Tenning + radio
50	Starter

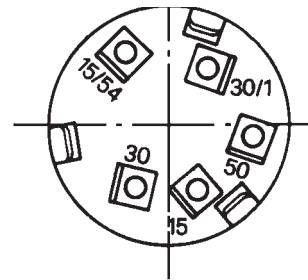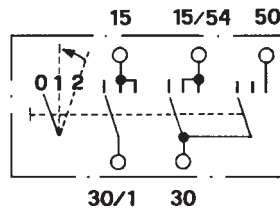

Tilbakefjærende

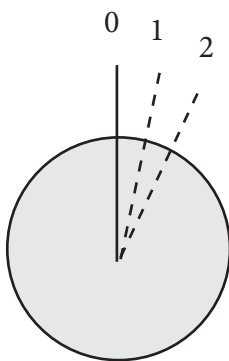 

Stillinger

0.	—		
1.	Tenningsstilling/Radio	30/1-15	30-15/54
2.	Startstilling	30/1-15	30-15/54-50

2021-10-29



Olsson Parts

Olssons i Ellös AB • Tlf. +46 304-751010
Slätthultsvägen 12 • S-474 31 Ellös
www.olssonparts.com • order@olssonparts.com