


Anvisning for startlås

V-30100800


ANV025

NO

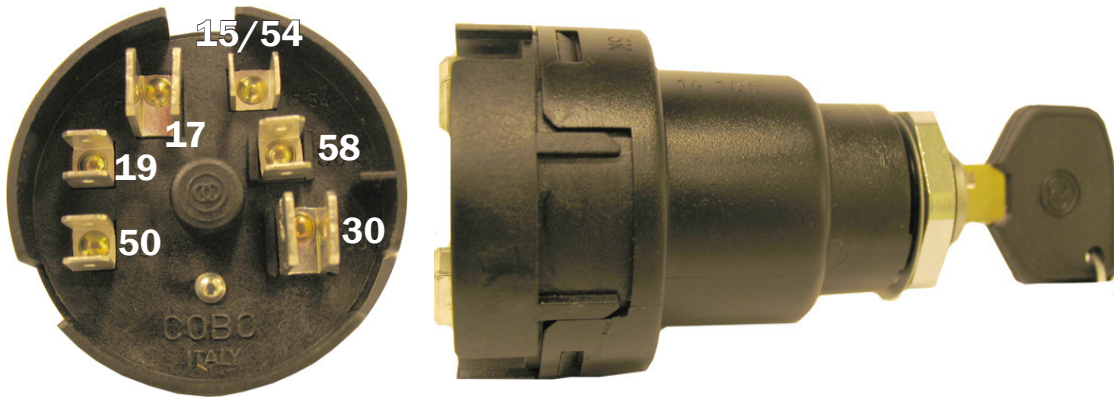

Tilkobling

30	+ Mating
58	Ekstra funksjon
15/54	Tenning + Radio
19	Glødeplugg
50	Starter
17	Ekstra funksjon

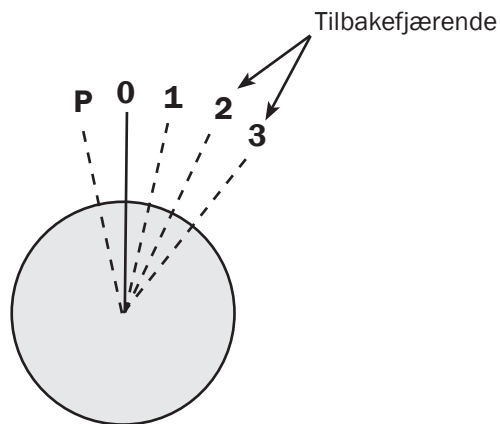

Stillinger

P.	Parkeringsstilling (inntrykt)	30-58
0.	—	
1.	Tenning/Radio	30-15/54
2.	Gløding/Tenning/Radio	30-19-15/54
3.	Start (inntrykt)	30-50-15/54-17

2021-10-29



Olssons i Ellös AB • Tlf. +46 304-751010
Slätthultsvägen 12 • S-474 31 Ellös
www.olssonparts.com • order@olssonparts.com