 
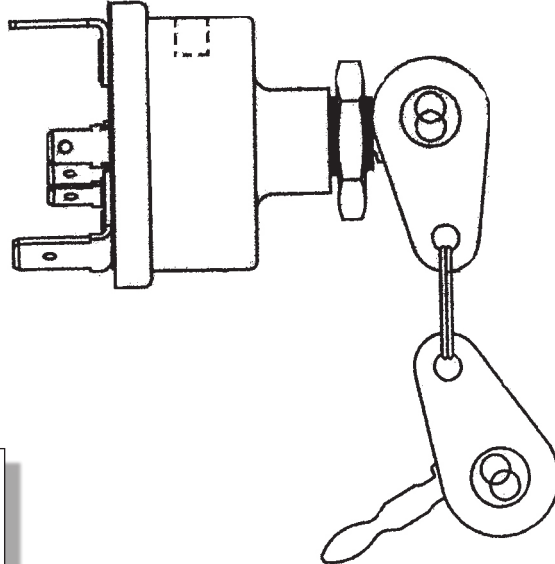 


# Anvisning for startlås

2846130

ANV047

 
NO

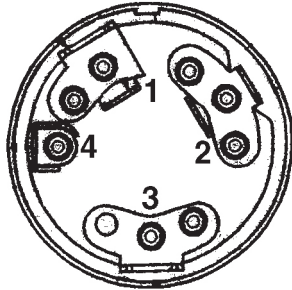

## Tilkobling

1. + Mating
2. Tenning
3. Glødeplugg
4. Starter

## Tilbakefjærende

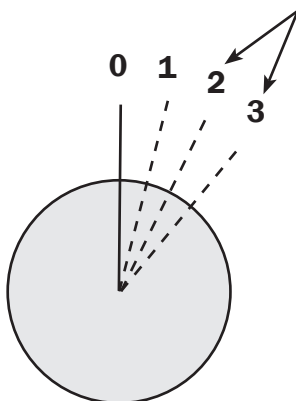

## Stillinger

- |                     |         |
|---------------------|---------|
| 0. —                |         |
| 1. Tenningsstilling | 1-2     |
| 2. Glødestilling    | 1-2-3   |
| 3. Startstilling    | 1-2-3-4 |

2021-11-08



**Olsson Parts**

Olssons i Ellös AB • Tlf. +46 304-751010  
Slätthultsvägen 12 • S-474 31 Ellös  
www.olssonparts.com • order@olssonparts.com