


Instruction for hose rupture valves


46175, 46176, 550137, 550139, 550140, 550158, 550160 & 550161

ANV057

EN

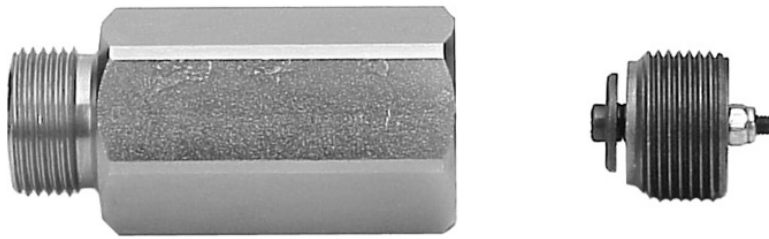

The valve can only be closed for flow in this direction.

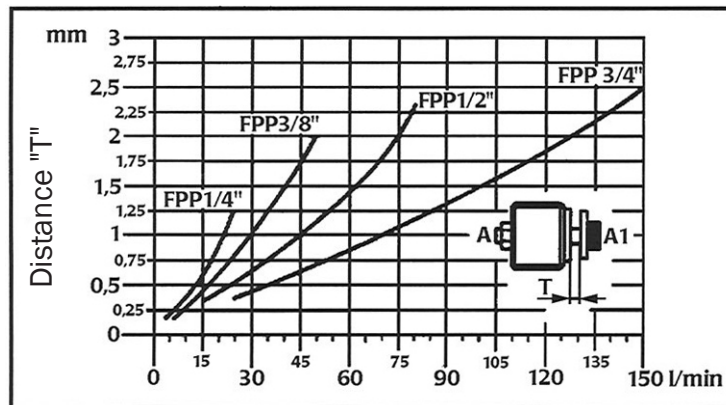

Setting distance for the hose rupture valve.

In order to ensure the correct function of the valve, the distance "T" the setting distance between the plate and housing, is adapted to the flow that corresponds to at least 1.5 times of the flow quantity through the hose rupture valve.

It is recommended to use "Loctite hydraulic seal" during assembly to prevent leakage over the valve insert.

2021-11-05



Olsson Parts

Olssons i Ellös AB • Tel. +46 304-751010
Slätthultsvägen 12 • S-474 31 Ellös
www.olssonparts.com • order@olssonparts.com