 
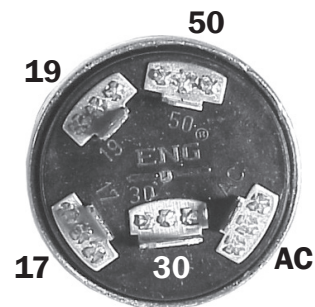 
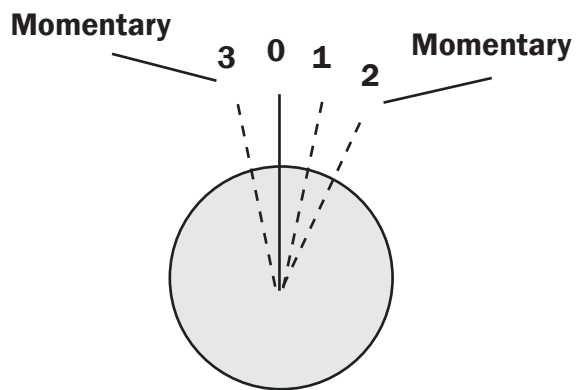 


Instruction for ignition switch

81806736

ANV063

EN

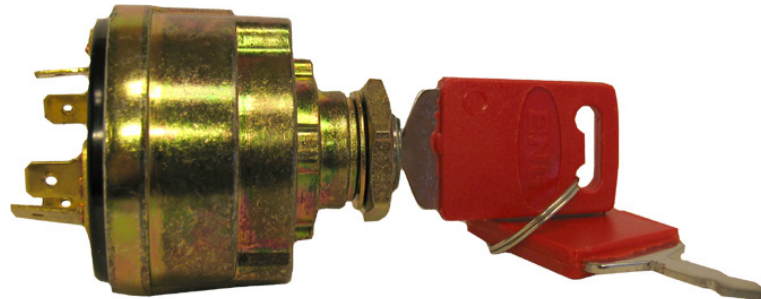

Positions

- | | |
|----------------------|-------------|
| 0. — | |
| 1. Ignition position | 30 - AC |
| 2. Start position | 30-AC-50-17 |
| 3. Heating position | 30-19-AC |

Connection

- | | |
|----|---------------------|
| 30 | + Supply |
| AC | Ignition + Radio |
| 50 | Starter motor |
| 19 | Heater plug |
| 17 | Same function as 50 |

2021-10-29



Olssons i Ellös AB • Tel. +46 304-751010
Slätthultsvägen 12 • S-474 31 Ellös
www.olssonparts.com • order@olssonparts.com