
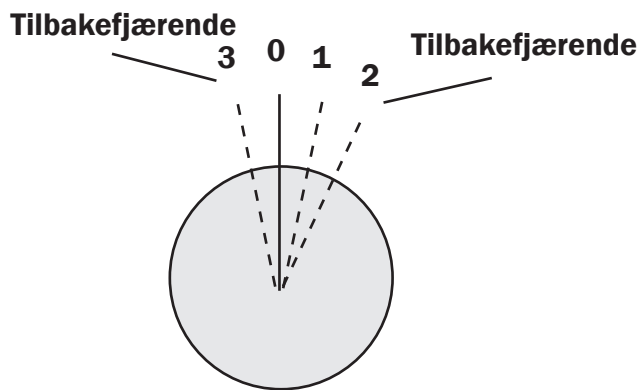


# Anvisning for startlås

81806736

ANV063

NO

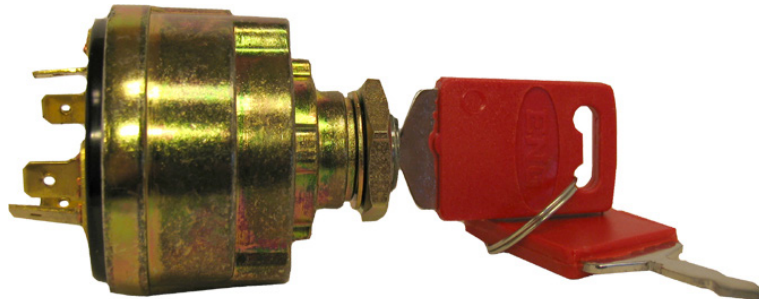

## Stillinger

0. —	
1. Tenningsstilling	30 - AC
2. Startstilling	30-AC-50-17
3. Glødestilling	30-19-AC

## Tilkobling

30	+ Mating
AC	Tenning + Radio
50	Starter
19	Glødeplugg
17	Samme funksjoner som 50

2021-10-29



Olssons i Ellös AB • Tlf. +46 304-751010  
Slätthultsvägen 12 • S-474 31 Ellös  
www.olssonparts.com • order@olssonparts.com