

# Instruction for anti sink valve

53941

ANV064

EN

## Mounting instructions

1. Unscrew the plastic cap on the banjo coupling on the valve.
2. Unscrew the hoses on the top link.
3. Screw on the valve where the hoses are fitted on the top link. Make sure the banjo screws are seated correctly in the threads and screw these in, in parallel. The text on the valve must face out from the stay.
4. Remove the plastic plugs in the A and B ports, remove the rubber seals.
5. Finally screw the hoses on the A and B ports.



2021-10-29



Olssons i Ellös AB • Tel. +46 304-751010  
Slätthultsvägen 12 • S-474 31 Ellös  
www.olssonparts.com • order@olssonparts.com