

Instruction for ignition switch

44053


ANV068

EN



Connection

1. + Supply
2. Parking
3. Ignition
4. Heating
5. Starter motor

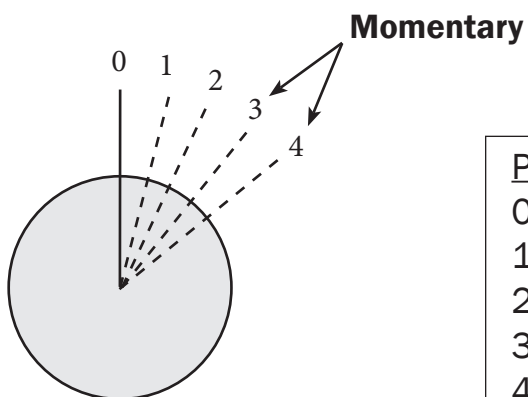

Positions

- | | |
|---------------------|---------|
| 0. – | |
| 1. Parking position | 1-2 |
| 2. Working mode | 1-2-3 |
| 3. Heating position | 1-3-4 |
| 4. Start position | 1-3-4-5 |

2021-10-29



Olsson Parts

Olssons i Ellös AB • Tel. +46 304-751010
Slätthultsvägen 12 • S-474 31 Ellös
www.olssonparts.com • order@olssonparts.com