

# Instruction for fuel gauge/sensor

39033 & 41204

ANV085

EN



## Connection

B Current from battery (+)  
T Connected to the terminal in the centre of the sensor

 Connected to earth



## Connection

Pin in the centre is connected to terminal T on the meter.

The small pin is connected to earth.

2021-11-08



Olssons i Ellös AB • Tel. +46 304-751010  
Slätthultsvägen 12 • S-474 31 Ellös  
www.olssonparts.com • order@olssonparts.com