ANV094 122238

This assembly tool facilitates installation of the cassette seal when renovating the water pump.

Cartridge seal










The shaft must be mounted in the pump housing before the seal is fitted.

The cartridge seal must be assembled with a tool that is included in certain repair sets, see figure 2.

The tool compresses the seal by about 2-3 mm and you then press the seal down into the right position, see figure 3. Once the seal is assembled, the longitudinal position of the shaft must not change. Remember that the counterhold must be placed on the shaft when the impeller is fitted. The tool and seal are shown in cross section.



(Cartridge seal in cross section)

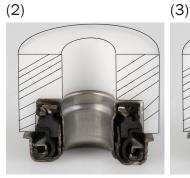





Compressed height 19 mm

