Check the connections before mounting, compare with the old fuel lift pump. In some cases, in and out are mirrored, this is rectified by loosening and turning the cover on the new fuel lift pump. In some cases, you can't get the connections at exactly the angle you want on our pump, even if you turn the cap.

