

## Assembly

Adapters and hoses installed on the couplings on the top link (plastic plugs and rubber seals removed first).

The top link is installed on tractors with the movable ends towards the attachment. Quick couplings are connected to the tractor's valves.

## Commissioning

Run the top link, without load, slowly in and out a few times to fill it with oil.

**Important!** Check that the fastening balls and stay run freely in all positions/settings to avoid damage to the top link. Repeat this when changing the attachment.

## Troubleshooting

- If the top link does not move:  
Check that the quick couplings are fitted correctly and to the right valve outlet.
- If the top link moves:  
To localise the leakage, connect an attachment in the top link and then disconnect the quick couplings from the tractor. If the top link stops the leakage is on the tractor's valve. If the top link continues to move the fault is on the top link (contact us).

## Maintenance

- In order to prevent damage to the moving piston rod and the couplings, check that the hoses do not show signs of external damage.
- Clean dirty quick couplings before connection.
- Always run the stay together after use if possible.
- Ensure the fastening balls are tightened correctly.
- Lubricate all moving parts with oil regularly.

