


# Instruction for 500-81 without series nipple

ANV122

EN

<b>Valve slide:</b>	<b>500-81-</b>
<b>Flow:</b>	<b>80 litre/min</b> (see pressure drop diagram)
<b>Max. pressure:</b>	<b>350 bar</b> (1-2 sections) <b>300 bar</b> (3 sections) <b>270 bar</b> (4-7 sections)
<b>Max counter pressure in return end:</b>	<b>25 bar</b>
<b>Outlet:</b>	<b>P.A and B 1/2" BSP, T 3/4 BSP</b>
<b>Temp. working range:</b>	<b>-30° to +80° C</b>
<b>Filtering:</b>	<b>60-90 µm</b>
<b>Recommended oil:</b>	<b>Mineral-based oil</b>
<b>Handle:</b>	<b>Included in all packages</b>
<b>Lever function:</b>	<b>Momentary unless otherwise stated</b>
<b>Series coupling:</b>	<b>Series nipple mounted in tank port and a plug dismantled to open a new tank port</b>
<b>Pressure relief valve:</b>	<b>Adjustable in the standard design 81-200 bar</b> <b>(also available in designs 15-80 bar and 201-380 bar)</b>

For the installation of hydraulic valves, only use sealing washers that seal, not thread sealing tape, string or the like. Make sure you know whether the valve block must be series connected or just have a pure return to the tank. Do not confuse these installation methods. If there is a pressure limiter, this must be adjusted to the right pressure.

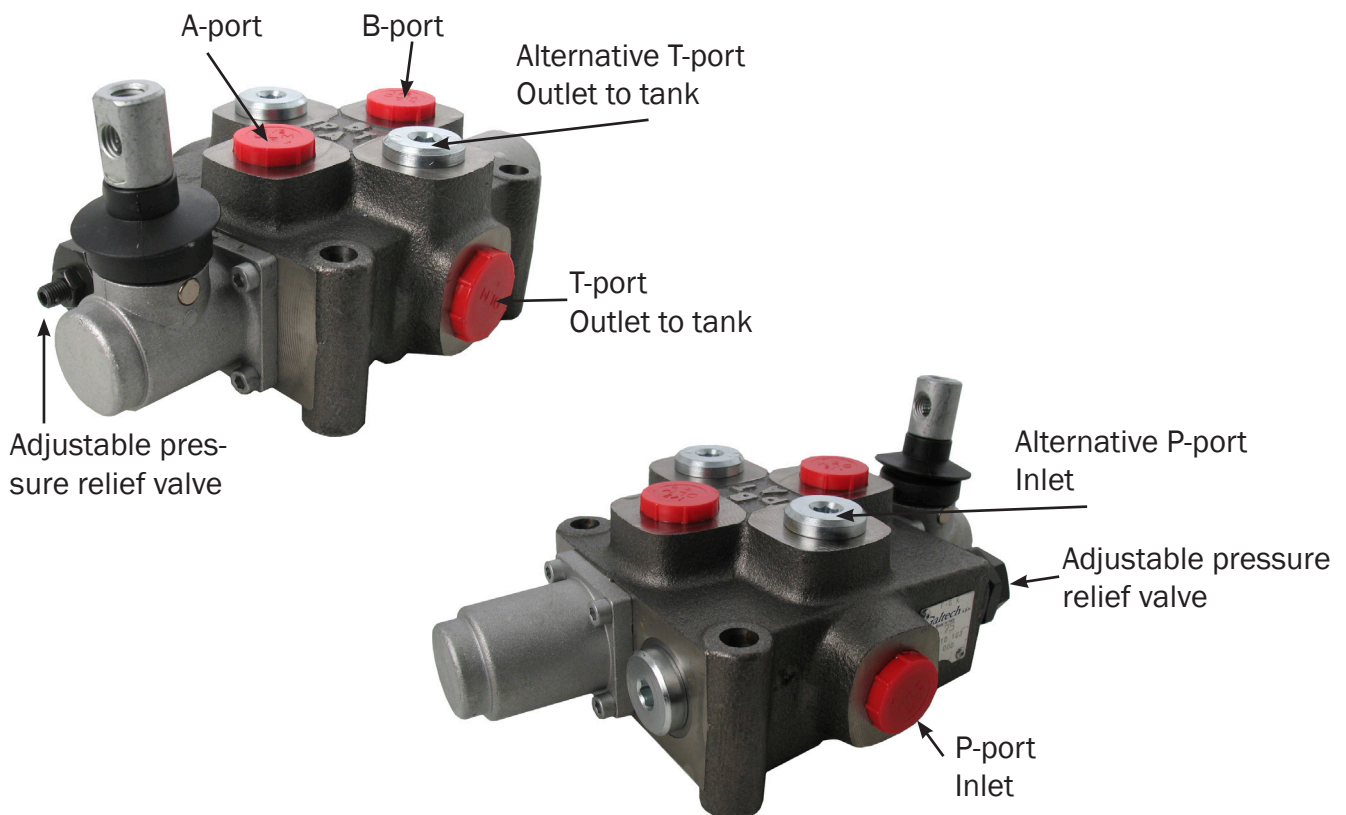

2021-11-08




Olssons i Ellös AB • Tel. +46 304-751010  
Slätthultsvägen 12 • S-474 31 Ellös  
www.olssonparts.com • order@olssonparts.com

# Instruction for 500-81 with series nipple

EN

<b>Valve slide:</b>	<b>500-81-</b>
<b>Flow:</b>	<b>80 litre/min</b> (see pressure drop diagram)
<b>Max. pressure:</b>	<b>350 bar</b> (1-2 sections) <b>300 bar</b> (3 sections) <b>270 bar</b> (4-7 sections)
<b>Max counter pressure in return end:</b>	<b>25 bar</b>
<b>Outlet:</b>	<b>P.A and B 1/2" BSP, T 3/4 BSP</b>
<b>Temp. working range:</b>	<b>-30° to +80° C</b>
<b>Filtering:</b>	<b>60-90 µm</b>
<b>Recommended oil:</b>	<b>Mineral-based oil</b>
<b>Handle:</b>	<b>Included in all packages</b>
<b>Lever function:</b>	<b>Momentary unless otherwise stated</b>
<b>Series coupling:</b>	<b>Series nipple mounted in tank port and a plug dismantled to open a new tank port</b>
<b>Pressure relief valve:</b>	<b>Adjustable in the standard design 81-200 bar</b> <b>(also available in designs 15-80 bar and 201-380 bar)</b>

For the installation of hydraulic valves, only use sealing washers that seal, not thread sealing tape, string or the like. Make sure you know whether the valve block must be series connected or just have a pure return to the tank. Do not confuse these installation methods. If there is a pressure limiter, this must be adjusted to the right pressure.

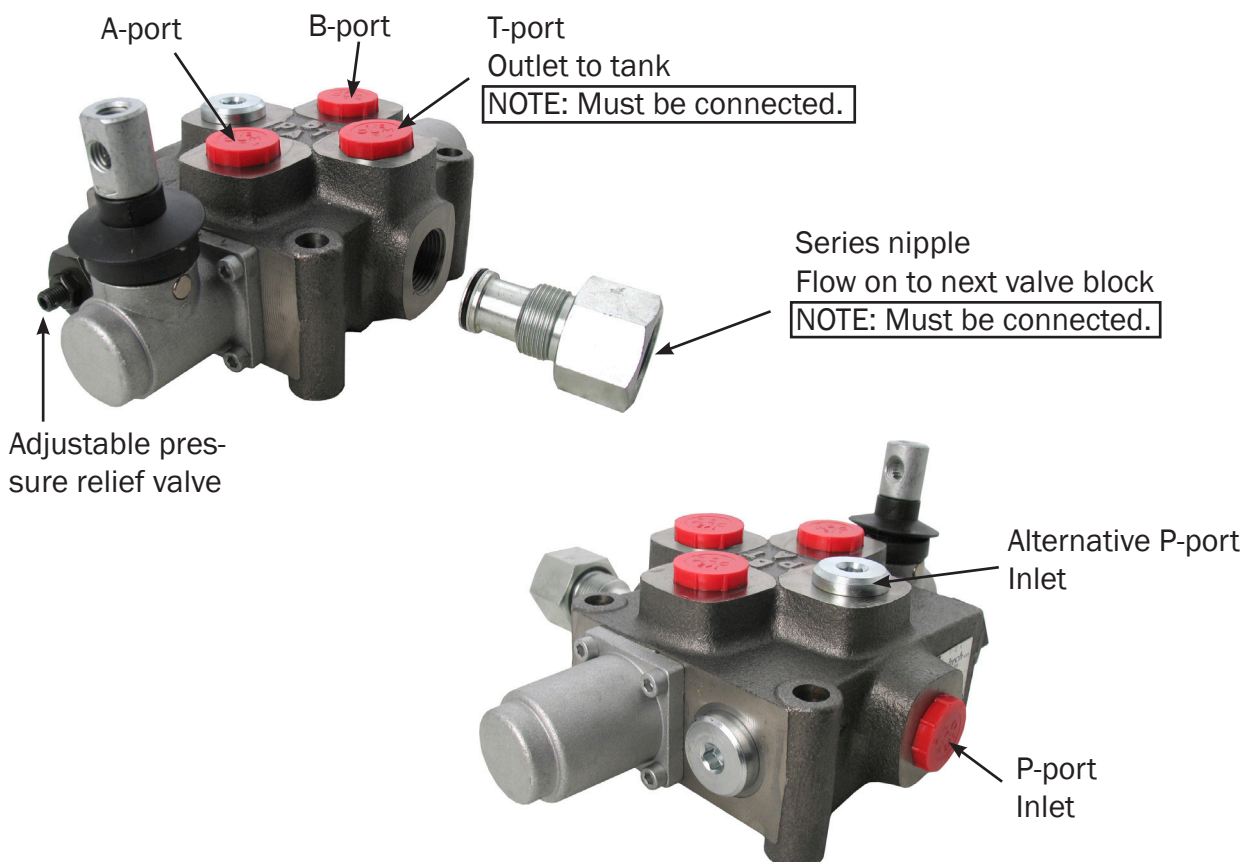

2021-11-08



**Olsson Parts.**

Olssons i Ellös AB • Tel. +46 304-751010  
Slätthultsvägen 12 • S-474 31 Ellös  
www.olssonparts.com • order@olssonparts.com