


Instruction for start contact

AL-62707

ANV126

EN

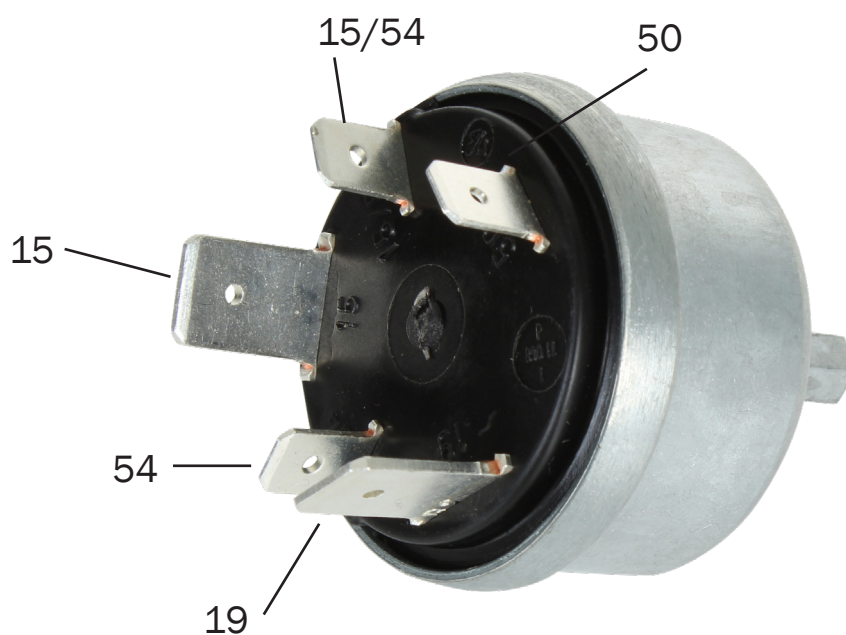

Pin	Function
15	Ignition
19	Check brake resistance
54	Brake light
50	Startkontakt
15/54	Ignition/Brake light

2021-04-19



Olsson Parts

Olssons i Ellös AB • Tel. +46 304-751010
Slätthultsvägen 12 • S-474 31 Ellös
www.olssonparts.com • order@olssonparts.com