

# Instruction for sprung comfort seat Cobo

32574


ANV141

EN



Control to move the seat forwards or backwards.

Setting for the spring pressure (50-130 kg).  
Push in = harder  
Pull out = softer

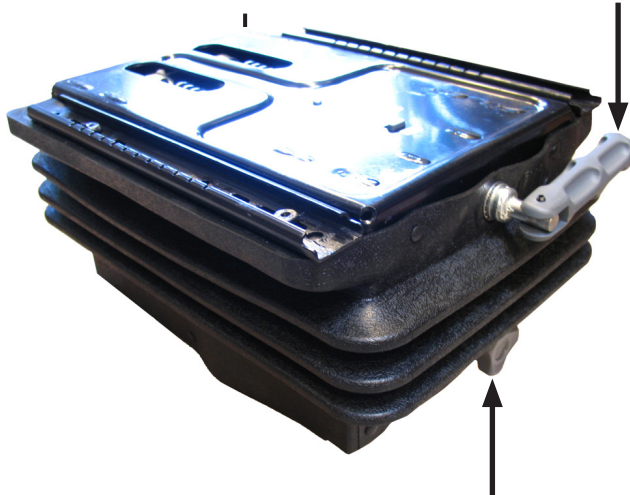




Height setting.  
Clockwise = Seat lowers  
Anticlockwise = Seat raised

2021-11-08



**Olsson Parts**

Olssons i Ellös AB • Tel. +46 304-751010  
Slätthultsvägen 12 • S-474 31 Ellös  
www.olssonparts.com • order@olssonparts.com

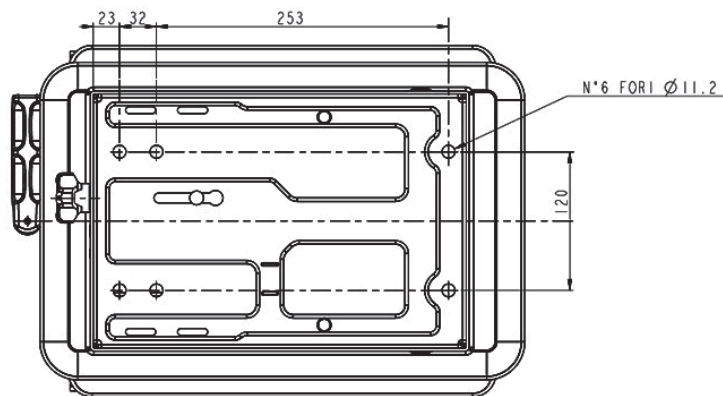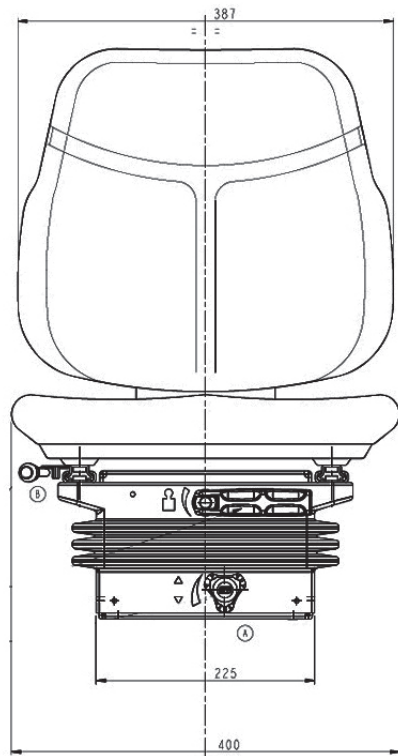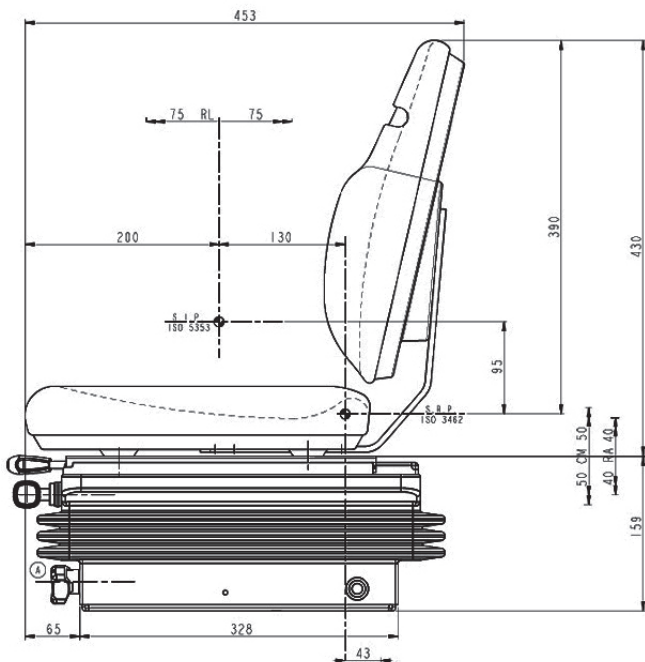

Slätthultsvägen 12 • SE-474 31 Ellös, Sweden  
 Tel: +46 (0)304-751010 • Fax +46 (0)304-751011  
 www.oie.se • order@oie.se