

Instruction for sprung comfort seat Cobo

32576

ANV143

EN



Vertically adjustable headrest



Arm rest adjustment

Adjustment of the backrest angle.
Clockwise = Back support forwards on top edge
Anticlockwise = Back support backwards on top edge

Control to move the seat forwards or backwards.






Height setting.
Clockwise = Seat lowers
Anticlockwise = Seat raised

Setting for the spring pressure (50-130 kg).
Clockwise = Harder
Anticlockwise = Softer

2021-11-08



Olssons i Ellös AB • Tel. +46 304-751010
Slätthultsvägen 12 • S-474 31 Ellös
www.olssonparts.com • order@olssonparts.com

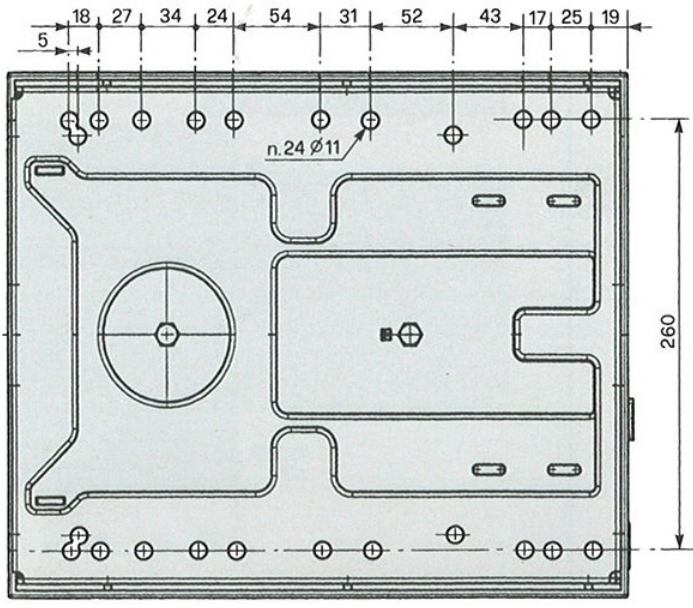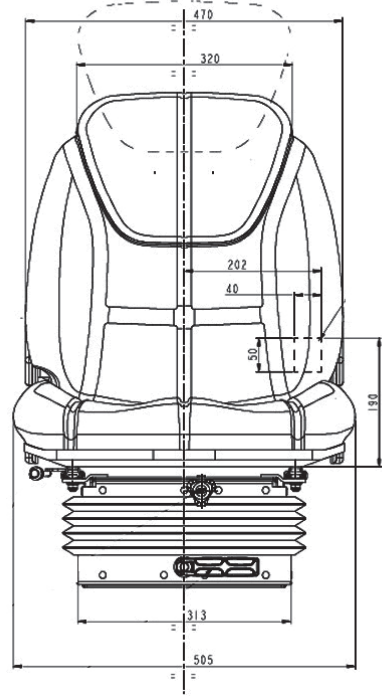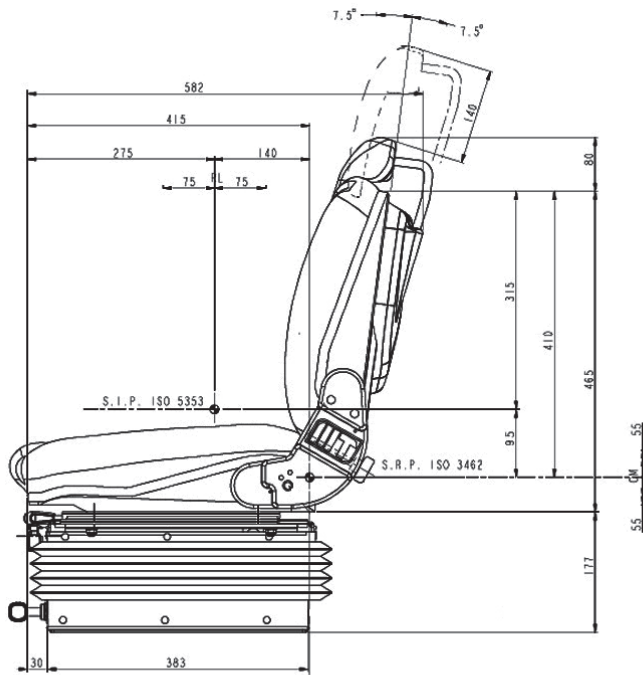

Slättthultsvägen 12 • SE-474 31 Ellös, Sweden
 Tel: +46 (0)304-751010 • Fax +46 (0)304-751011
 www.oie.se • order@oie.se