


Instruction for stop solenoid

29608 (12 V) & 30669 (24 V)

ANV145

EN

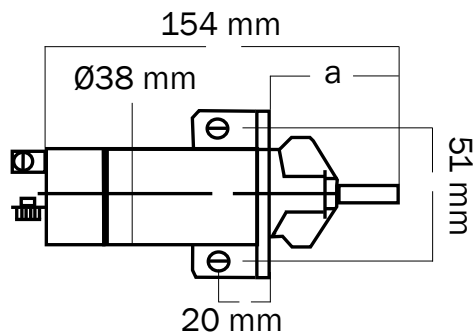


a= Actuated position 33.5 mm
(the solenoid must be able to switch to this position)

a= Unactuated position max. 68 mm

All mounting holes

Ø7 mm

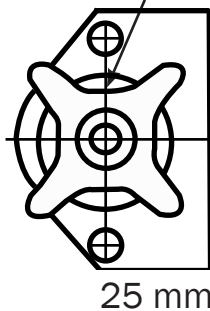

Connection

Connect pin POS. (+) and NEG. (-)

AUX is used for the indicator lamp.

For the actuated position the indication lamp lights –
for the unactuated position it goes out.

When a full stroke is obtained the solenoid switches itself to the
“Holding” coil.

If installed incorrectly so that it cannot switch to the end position
(a=33.5) this will not work and the switching coil fails within 30
seconds.

Power consumption

Part no. 29608 (12 V)

30 A (switch)

0.7 A (hold)

Part no. 30669 (24 V)

17 A (switch)

0.25 A (hold)

2021-11-08



Olssons i Ellös AB • Tel. +46 304-751010
Slätthultsvägen 12 • S-474 31 Ellös
www.olssonparts.com • order@olssonparts.com