



- The load damping valve is placed as close to the cylinders as possible.
- The electric valve is normally closed. The voltage must be switched on to activate load damping.
- The valve is also equipped with manual shut-off.
- The accumulators are precharged and are ready to use.

NOTE! Maximum system pressure 210 bar.

