

Original design

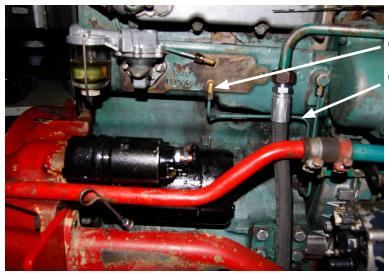

Connection elbow
Oil pressure pipe

New design

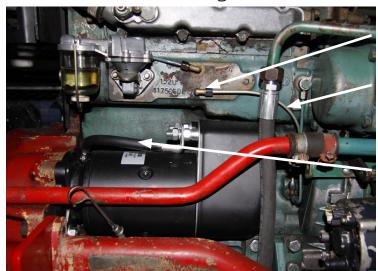

New connection elbow

New oil pressure pipe

Earth cable



- Dismantle the original oil pressure pipe and connection elbow.
- Fit a new connection elbow that has thread sealant.
 Direct the pipe connection on the elbow as illustrated.
- · Fit the new oil pressure pipe.
- Fit the starter motor and at the same time route the supplied earth cable between the starter motor's fastening bolt and the earth terminal on the starter (as illustrated).