


# Instruction for shuttle valve

46506

ANV192

EN

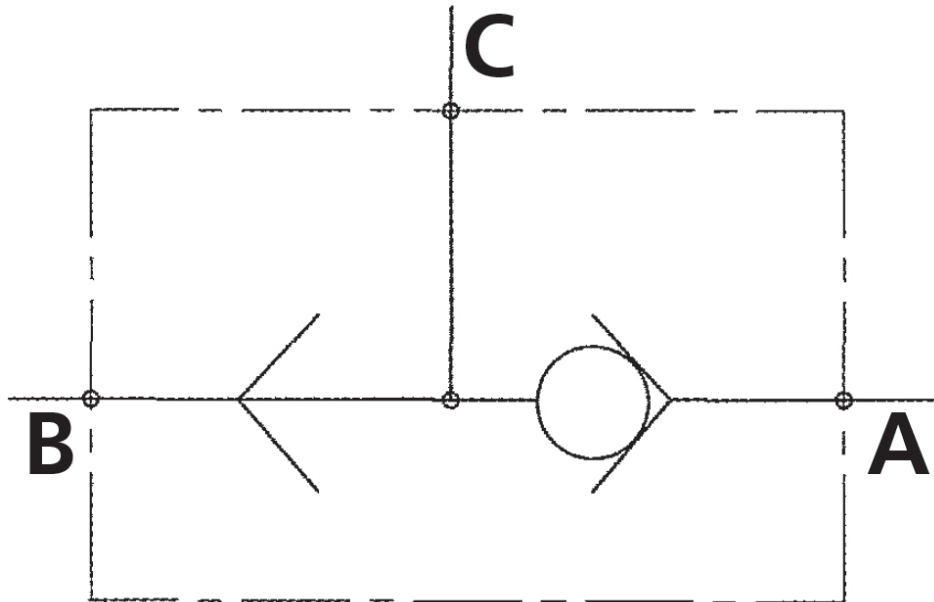

Connection example:

A= Connected to the LS port on valve block 1

A= Connected to the LS port on valve block 2

C= Connected to the pump's LS connection

2021-11-08



**Olsson Parts**

Olssons i Ellös AB • Tel. +46 304-751010  
Slätthultsvägen 12 • S-474 31 Ellös  
www.olssonparts.com • order@olssonparts.com