


Instruction for light switch

38642

ANV199


EN

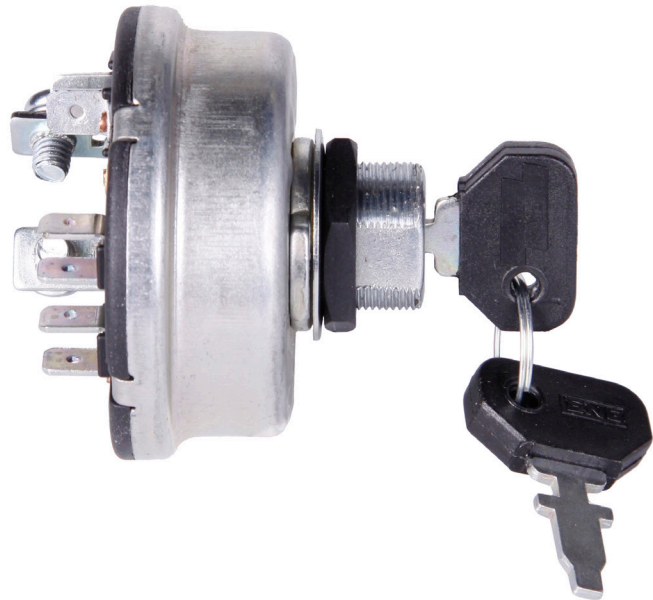

30-51 are connected when the lock is used as an ignition switch. Other connections are used for lighting.

Connection

30. + Supply
30/1 + Supply

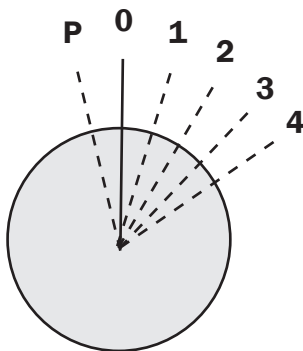

Positions

P. 30/1 - 58
0.
1. 30-51
2. 30-51 30/1 - 58
3. 30-51 30/1 - 58-56B
4. 30-51 30/1 - 58-56A

2023-10-11



Olssons i Ellös AB • Tel. +46 304-751010
Slätthultsvägen 12 • S-474 31 Ellös
www.olssonparts.com • order@olssonparts.com