


Instruction for ignition switch


AL-19890

ANV200

EN

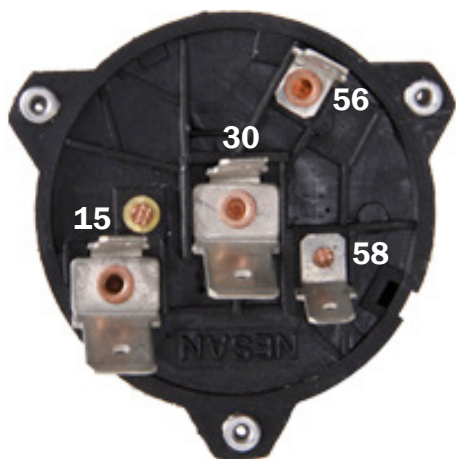

Connection
30. + Supply

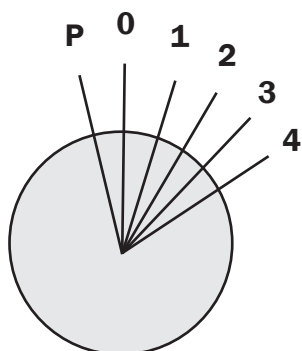

Positions
P. 58
0. —
1. 15
2. 15-58
3. 15-58-56b
4. 15-58-56a

58 — Rear lights, licence plate lights,
instrument lighting and position light.
15 — Ignition.
56b — Dipped beam.
56a — Main beam.

2021-07-02