


# Anvisning for tenningslås


AL-19890

ANV200

NO

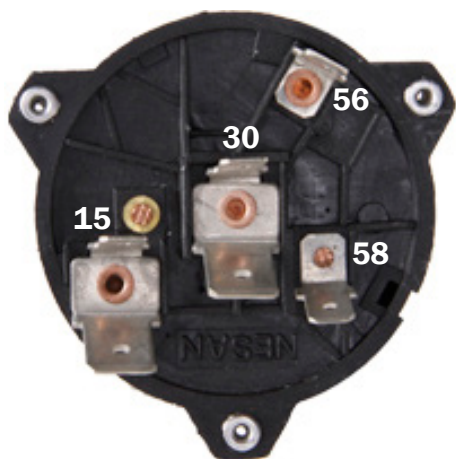

Tilkobling  
30. + Mating

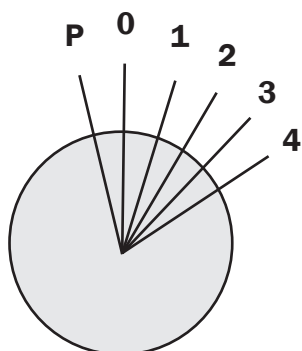

## Stillinger

- P. 58
- 0. —
- 1. 15
- 2. 15-58
- 3. 15-58-56b
- 4. 15-58-56a

- 58 — Baklamper, skiltlamper, instrumentbelysning og posisjonslys.
- 15 — Tenning.
- 56b — Kort lys.
- 56a — Langt lys.

2021-11-08